







Special Reminders Procedure Overview Instructions & Explanations

<p>† Long clothing, gloves, full face respirator, safety boots.</p> <p> A leak may occur. Refer to i₁ on reverse side for more information</p> <p>i₂ Special note on reverse side</p> <p>i₃ Special note on reverse side</p> <p>□₁ Picture on front side</p> <p>□₂ Picture on front side</p> <p>□₃ Picture on front side</p> <p>□₄ Picture on front side</p> <p>⊕₁ Enlarged picture on reverse side</p> <p>⊕₂ Enlarged picture on reverse side</p> <p>⊕₃ Enlarged picture on reverse side</p> <p>⊕₅ Transfer Process Schematic</p>	<p>1 PREPARE UNITS FOR TRANSFER †</p> <p>2 COMMENCE TRANSFER †</p> <p>3 MONITOR TRANSFER †</p> <p>4 COMPLETE TRANSFER †</p> <p>5 RETURN UNITS AND EQUIPMENT TO SAFE CONDITION †</p>	<p>✓ Pre-Checks (Refer reverse page)</p> <p>1.1 Remove dust cap from applicator tank valve 9 (Red).</p> <p>1.2 Connect nurse tank liquid hose end valve 8 (Red) to valve 9 (Red) on applicator tank. □₁</p> <p>1.3 Remove dust cap from applicator tank valve 7 (Yellow).</p> <p>1.4 Connect nurse tank vapour hose end valve 6 (Yellow) to valve 7 (Yellow) on applicator tank. □₂</p> <p>1.5 Close all bleed screws on valves.</p> <p>2.1 Open valve 9 (Red) on applicator tank. □₃</p> <p>2.2 Open valve 8 (Red) on applicator tank. □₃</p> <p>2.3 Open valve 7 (Yellow) on applicator tank</p> <p>2.4 Open valve 6 (Yellow) on applicator tank.</p> <p>2.5 Open valve 4 (Blue) on nurse tank.  ⊕₁</p> <p>2.6 Open valve 1 (Red) on nurse tank.</p> <p>2.7 Start compressor engine</p> <p>3.1 Check percentage volume gauge and partly open and then close fixed level bleed gauge at frequent intervals.</p> <p>3.2 When applicator tank is 60% full, partly open fixed level bleed gauge.</p> <p>3.3 When applicator tank full (85%), close fixed level bleed gauge. □₄</p> <p>3.4 Close valve 1 (Red) on nurse tank.</p> <p>4.1 Clear liquid hose on nurse tank of liquid. i₂ ⊕₂</p> <p>4.2 Stop compressor engine</p> <p>4.3 Close valve 8 (Red) on applicator tank</p> <p>4.4 Close valve 9 (Red) on applicator tank.</p> <p>4.5 Close valve 6 (Yellow) on applicator tank</p> <p>4.6 Close valve 7 (Yellow) on applicator tank.</p> <p>5.1 Bleed connections between liquid and vapour valves on applicator tank. i₃ ⊕₃</p> <p>5.2 Disconnect hose end valves 8 (Red) and 6 (Yellow) from applicator tank.</p> <p>5.3 Replace dust caps to applicator tank valves 9 (Red) and 7 (Yellow)</p> <p>5.4 Close valve 4 (Blue) on nurse tank.</p> <p>5.5 Stow hoses on nurse tank. ⊕₄</p> <p>✓ Post-Checks (Refer reverse page)</p>	<p>□₁ 1.2 Connect valve 8 to valve 9</p>  <p>□₂ 1.4 Connect valve 6 to valve 7</p>  <p>□₃ 2.1 Open valve 9 and valve 8</p>  <p>□₄ 3.3 Close fixed level bleed gauge</p> 
--	--	--	---

✓ Pre-Checks (Things to check before starting this process)

- Immobilize tractor and implement
- Check water bottles are full
- Remove caps and safety clamp from water bottles
- Check and fit PPE
- Check wind direction

✓ Post-Checks (Things to check after completion)

- Check PPE and return to personal safety kit
- Replace caps to water bottles
- Return safety clamp on water bottle carrier

#₁ i₁ 2.3 Open valve 4 (Blue) on nurse tank.

1. If a leak occurs, check the bleed screws are closed.
2. If the leak persists:
 - a. Close valves in question and bleed connection
 - b. Disconnect coupling
 - c. Check gasket
 - d. Replace gasket if necessary
 - e. Reconnect coupling
 - f. Open valves



#₂ i₂ 4.1 Clear liquid hose on Nurse tank of liquid.

1. Open valve 2 (Red) on nurse tank to clear the hose of liquid.
2. After 15 seconds, close valve 2 (Red) on nurse tank.




#₃ i₃ 5.1 Bleed Connections

1. Open bleed screws on valves 9 (Red) and 7 (Yellow) on applicator tank.
2. After product has cleared from hose and valves close bleed screws on valve 9 (Red) and 7 (Yellow).



#₄ Transfer Process Schematic

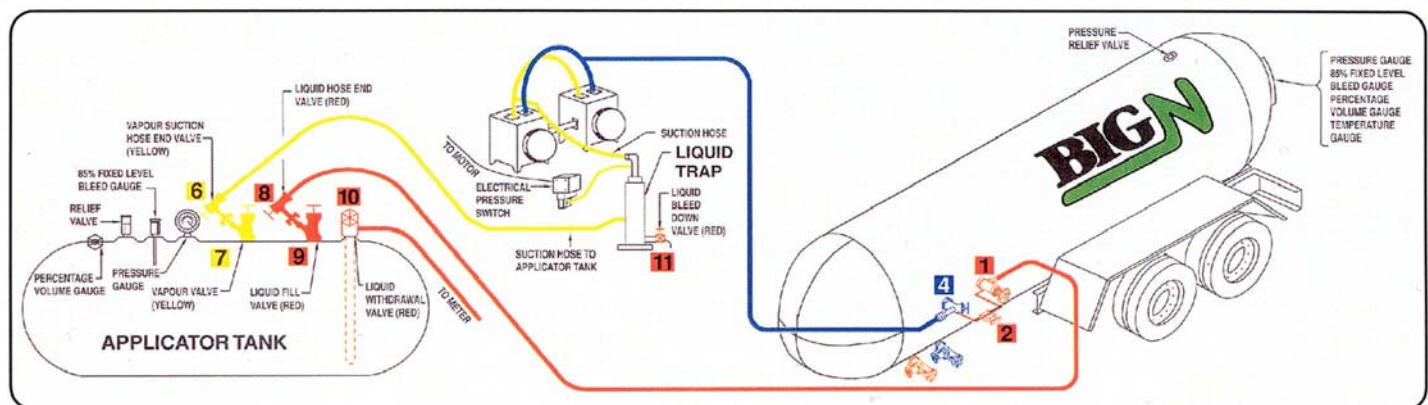

Talsico™ Process Picture Maps are created under license from Talsico, LLC. Talsico™ Process Picture Maps and all associated intellectual property are owned by Talsico. Duplication or use of this methodology or format is prohibited without the express written permission of Talsico. Contact: learning@talsico.com