

Special Reminders Procedure Overview Instructions & Explanations

† Long Clothing, gloves, full face respirator, safety boots

⚠️ 1 Ensure the platform and ladder are placed so that you can turn the valve off safely

⚠️ 2 Check for leaks. If a leak occurs turn the valve off immediately

☐₁ Picture on front side

☐₂ Picture on front side

†₁ Special note on reverse side

⊕₁ Enlarged picture on reverse side

⊕₂ Enlarged picture on reverse side

🔗 Obtain all tools & materials listed on reverse side

1 Prepare Equipment

2 Reset excess flow valve †

✓ Pre-Checks (See reverse side)

- 1.1 Position yourself upwind of the applicator tank.
- 1.2 Put on PPE. 🔗
- 1.3 Turn the liquid withdrawal valve off. †

⚠️ 1 ☐₁

- 2.1 Wait for excess flow stem to click open. †₁ ⊕₁ ⊕₂
- 2.2 Slowly open the liquid withdrawal valve. ⚠️ 2 ☐₂
- 2.3 Remove PPE

✓ Post-Checks

☐₁ ⚠️ 1 1.3 Turn the liquid withdrawal valve off.



☐₂ ⚠️ 2 2.2 Slowly open the liquid withdrawal valve.



✓ **Pre-Checks** (Things to check before starting this process)

- Check and prepare PPE
- Check wind direction


🔗 **Tools & Materials Required**

ID	Qty	Description	Step
PPE	1	<input type="checkbox"/> Personal Safety Kit	1.2

✓ **Post-Checks** (Things to check after completion)

- Check and clean PPE
- Return PPE to Personal Safety Kit

i **#**₁ **2.1** Excess flow stem will engage with excess flow

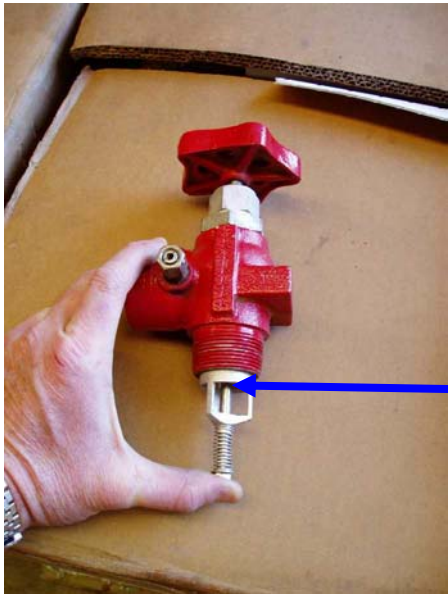

#₂ **2.1** Wait for excess flow stem to click open

